

## **CALLER ID**

### **TO MANUALLY DISPLAY CALLER INFORMATION:**

1. Press the LIST soft key
2. Press the CID soft key
3. Press the UP and DOWN soft keys to see the list of calls available in the buffer
4. To call the displayed number, press CALL 1
5. If name of caller is displayed, to check number press the CHECK button
6. Press CLEAR when done